
### Instruction of DC-3S ---3 speed controller


# Manipulation guide

#### **Special for the Energy Recovery Ventilators**

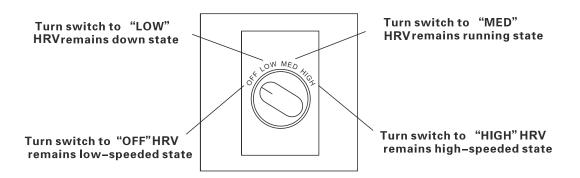

#### **Connection of circuit**

Please use the schematic diagram as follow to connect controlling circuit of HRV:

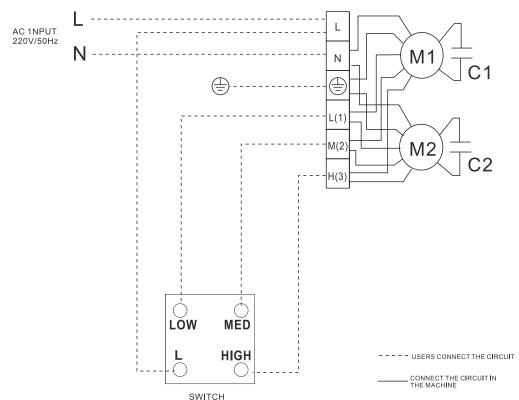

## **Explanation:**

- wire connection in broken lines in the wiring diagram must be conducted by the builder.
- After completion of wiring, check again there is no wrong wiring before power"ON".
- We recommend that you use a switch with more than 3mm distance to break contact and more than 10A rated current.
- We recommend that you use the polyvinyl chloride insulated and sheathed cables for fixed wiring with  $\phi$  1.38,  $\phi$  1.78 in diameter or 1.5 mm<sup>2</sup>-2.5mm<sup>2</sup> in conformity.